

# Bosch Dishwasher Error Code Cheat Sheet

What the common codes mean and what to do, from Max Appliance Repair Sarasota

## Drain and filter codes (usually DIY)

### 1 E22 - filter blocked

Twist out the fine filter, rinse the mesh, clear the sump.

### 2 E24 - drain blocked

Check the drain hose for kinks; clear the air gap or disposal inlet.

### 3 E25 - drain pump blocked

Check the pump impeller for glass or debris; it should spin freely.

## Leak and heating codes (often a pro)

### 1 E15 - water in the base

One-time may clear; if it returns, unplug and have the leak traced.

### 2 E01 - heating circuit fault

Reset once; if it returns, the heater or relay needs testing.

### 3 E09 - heating element failed

Dishes come out wet and cool; a pro repair with parts.

## First steps for any code

### 1 Power off and shut the water

Unplug or trip the breaker, close the under-sink valve before reaching in.

### 2 Try a full power reset

Off for two minutes, restore power, run a short rinse.

### 3 Clean the filter more often here

Sarasota hard water builds scale fast; clean every couple of weeks.

**Stuck on a repair in Sarasota and Manatee County? Our technicians can help.**

[maxappliancepairsarasota.com/contact/](https://maxappliancepairsarasota.com/contact/) | Same-day and next-day service across the Gulf Coast